

Read the instructions and warnings in this manual CAREFULLY BEFORE using this firearm.

## **Owner's Manual**



PPK - PPK/S



Distributed in the United States by Smith & Wesson®

2100 Roosevelt Avenue • Springfield, MA 01104 1-800-372-6454 • Fax: 413-747-3682 www.waltheramerica.com



### WARNING



READ THESE INSTRUCTIONS
AND WARNINGS CAREFULLY. BE
SURE YOU UNDERSTAND THESE
INSTRUCTIONS AND WARNINGS
BEFORE USING THIS FIREARM.
FAILURE TO READ THESE
INSTRUCTIONS AND TO FOLLOW
THESE WARNINGS MAY RESULT
IN SERIOUS INJURY OR DEATH
TO YOU AND OTHERS

This SAFETY, INSTRUCTION and PARTS MANUAL should always accompany this firearm and be transferred with it upon change of ownership or when presented to another person. A copy of the SAFETY, INSTRUCTION, & PARTS MANUAL is available FREE upon request from:

# WALTHER CUSTOMER SUPPORT CENTER 2100 ROOSEVELT AVENUE SPRINGFIELD, MA 01104 TEL.: 1-800-372-6454

I-600-37*2*-04∜ F-mail·

customerservice@waltheramerica.com

YOUR SAFETY RESPONSIBILITIES	3-7
SAFE STORAGE AND TRANSPORTATION	7-8
NOMENCLATURE	9
PREPARATION FOR FIRING	
AMMUNITION	10-12
MODEL NUMBER IDENTIFICATION	12
INSPECTING YOUR HANDGUN	13-14
LOADING	14-16
LOADED CHAMBER INDICATOR	16-17
FIRING	17
MANUAL COCKING	
DECOCKING	
CLEARING MISFIRES	18
PRODUCT WARNING	
UNLOADING	19
FIELD STRIPPING DISASSEMBLY	
FIELD STRIPPING REASSEMBLY	
SIGHT ADJUSTMENT	
MAGAZINE DISASSEMBLY	
MAGAZINE ASSEMBLY	
CLEANING AND MAINTENANCE	
SERVICE, SHIPPING AND PARTS	
WARRANTY	
WARNING STATEMENT	27

## YOUR SAFETY RESPONSIBILITIES

## SAFETY IS YOUR NUMBER ONE RESPONSIBILITY!!!!

At home, in the field, at the range, or anywhere, the first concern of every firearm owner should be safety. Apply the following safety rules in every situation, with any kind of firearm.



## WARNING: YOU MUST FOLLOW ALL OF THESE SAFETY RULES TO ENSURE THE SAFE USE OF YOUR FIREARM

 SAFE GUN HANDLING IS YOUR PERSONAL RESPONSIBILITY at all times. Firearms are dangerous and can cause serious injury or death if they are misused or used inappropriately. Safety must be the prime consideration of anyone who owns or handles firearms.

- YOU ARE RESPONSIBLE FOR THE FIREARM AT ALL TIMES. In owning a firearm, you must under take full-time responsibility for your firearm's safety and security. You must protect yourself and all others against injury or death from misuse of the firearm.
- In particular, you must secure firearms safely from children and unauthorized users. A lock has been provided for your use with this firearm. Never assume that the use of this lock is sufficient to safely secure your firearm. You must always evaluate your personal situation and employ the security system(s) that meets your needs and prevents children and unauthorized users from gaining access to your firearm.
- Accidents are the result of violating the rules of safe gun handling and common sense.
- For your safety and the safety of others, <u>NEVER</u>
   <u>RELY ON MECHANICAL FEATURES ALONE.</u>
   Only your safe gun-handling habits will ensure the safe use of your firearm. This is your responsibility.
- NEVER KEEP AMMUNITION IN THE SAME LOCATION AS THE HANDGUN. Store in a separate and secure place.
- DO NOT ALTER, MODIFY OR REPLACE ANY OF THE PARTS OF YOUR FIREARM unless this work is performed by a qualified gunsmith using genuine Walther parts. If you do otherwise, improper functioning may occur and serious injury may result.
- NEVER MANIPULATE, ADJUST OR CHANGE ANY
   OF THE INTERNAL COMPONENTS OF YOUR
   FIREARM including the firing pin, sear, or drawbar.
   Improper manipulation of any internal component
   may affect the safety and reliability of your firearm
   and may cause serious injury.
- READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE USING YOUR FIREARM.



WARNING: THE FAILURE TO FOLLOW THESE BASIC FIREARM SAFETY RULES MAY RESULT IN AN UNINTENDED DISCHARGE WHICH COULD CAUSE SERIOUS PERSONAL INJURY OR DEATH TO YOU OR OTHERS.

- BEFORE HANDLING ANY FIREARM,
   UNDERSTAND ITS OPERATION. Not all firearms
   are the same. Familiarize yourself with the mechanical
   features of any firearm you intend to use. If you feel
   uncertain about any operational aspects of your handgun,
   please contact Walther at 1-800-372-6454 before proceeding
   with its operation.
- ALWAYS SAFELY STORE AND SECURE YOUR FIREARM. Safe and secure storage of your firearm is one of the most important responsibilities of firearms ownership. It is a full-time responsibility. You must always secure your firearm and ammunition separately so that they are not accessible to children or other unauthorized persons. (See Safe Storage Instructions.)
- ALWAYS TREAT EVERY FIREARM AS IF IT IS
   LOADED AND WILL FIRE IF THE TRIGGER
   IS PULLED. Do not take anyone's word that the
   firearm is unloaded always check for yourself.
   Never pass your firearm to another person until the
   cylinder or action is open and you visually check that it
   is unloaded. Keep your firearm unloaded and safely stored
   when not in use.
- ALWAYS KEEP YOUR FIREARM POINTED IN A
   SAFE DIRECTION. Never point a firearm at anyone
   or anything you do not intend to shoot whether or not
   it is loaded. This is particularly important when
   loading, unloading, or field stripping the gun. ALWAYS
   control the direction of the firearm.
- NEVER PLACE YOUR FINGER ON THE TRIGGER
   INSIDE THE TRIGGER GUARD UNLESS YOU INTEND
   TO FIRE. Ensure that other objects do not touch the trigger.
- ALWAYS BE SURE OF YOUR TARGET AND WHAT
   IS BEYOND IT. Always be sure of where the bullet
   will strike and shoot only where there is a safe
   backstop free of obstructions, water or other
   surfaces which can cause ricochets. Do not fire into
   the sky.
- NEVER DISASSEMBLE YOUR HANDGUN OR MANIPULATE THE INTERNAL COMPONENTS OF YOUR HANDGUN BEYOND the field stripping procedure outlined in this manual. Improper disassembly or manipulation of your handgun may be dangerous and can lead to serious injury or death.
- NEVER CARRY OR STORE A FIREARM with the hammer or striker in the cocked position.

- NEVER ALLOW A FIREARM TO BE USED BY INDIVIDUALS WHO HAVE NOT READ THESE FIREARMS SAFETY RULES and do not understand its safe operation and the rules of safe gun-handling.
- BE SURE ALL ACCESSORIES, SUCH AS HOLSTERS
   AND GRIPS, ARE COMPATIBLE with the handgun and that the accessories do not interfere with safe operation.
- ALWAYS USE THE CORRECT AMMUNITION FOR YOUR PARTICULAR FIREARM as indicated by the marking on the barrel. Never use non-standard, reloaded, or "handloaded" ammunition which has not been subjected to internal ballistic pressure testing.
- ALWAYS HAVE ADEQUATE VENTILATION.
   Discharging firearms in poorly ventilated areas, cleaning firearms, or handling ammunition may result in exposure to lead and other substances known to cause birth defects, reproductive harm, and other serious physical injury. Review the warnings and labels for all ammunition and cleaning products carefully. Wash hands thoroughly after exposure.
- NEVER USE ALCOHOL OR DRUGS BEFORE OR WHILE SHOOTING. Do not use your firearm if you are on any medication which impairs, even slightly, your mental or physical ability.
- ALWAYS WEAR EYE AND HEARING PROTECTION
   SPECIFIED FOR FIREARM USE every time you discharge your firearm. Make sure others in the vicinity of where you will be shooting do so as well.
- NEVER ALLOW ANY ALTERATION OR REPLACEMENT
   OF PARTS IN YOUR WALTHER FIREARM UNLESS
   PERFORMED BY A QUALIFIED GUNSMITH
   using genuine Walther parts. If you do otherwise,
   improper functioning of your firearm may occur and serious
   injury or death may result.
- NEVER CROSS OBSTACLES SUCH AS FENCES OR STREAMS WITH A LOADED FIREARM.
- Firearm safety training is available. Contact your dealer, law enforcement agency, local sportsman's club, etc. for availability.
- APPROPRIATE USE FOR YOUR FIREARM MEANS
   <u>USING YOUR FIREARM FOR LEGAL PURPOSES</u>. For
   example target shooting and lawful resistance of deadly
   criminal force.

WARNING: SAFE USE OF A FIREARM IS YOUR PERSONAL RESPONSIBILITY AND THE FAILURE TO FOLLOW ALL OF THESE BASIC SAFETY RULES MAY RESULT IN SEVERE PERSONAL INJURY OR DEATH TO YOU OR OTHERS. YOU ARE THE MOST IMPORTANT SAFETY DEVICE WHEN IT COMES TO THE USE OF YOUR FIREARM AND WALTHER WILL NOT BE RESPONSIBLE FOR ANY PERSONAL INJURY, DEATH OR PROPERTY DAMAGE THAT RESULTS FROM: (1) THE CRIMINAL OR NEGLIGENT USE OF THIS HANDGUN; (2) A DISREGARD OF THESE SAFETY INSTRUCTIONS AND WARNINGS; (3) IMPROPER OR CARELESS HANDLING OF THIS FIREARM; (4) THE USE OF NONSTANDARD, DEFECTIVE, IMPROPER OR RELOADED AMMUNITION; OR (5) IMPROPER OR NEGLIGENT MODIFICATIONS OR REPAIRS TO THE HANDGUN.

## SAFE STORAGE & TRANSPORTATION

WARNING: SAFE AND SECURE STORAGE OF YOUR FIREARM IS ONE OF THE MOST IMPORTANT RULES OF FIREARM SAFETY. YOUR FAILURE TO FOLLOW THESE RULES MAY RESULT IN SERIOUS INJURY OR DEATH TO YOU OR OTHERS.

- You must always secure your firearm and ammunition separately so that they are not accessible to children or other unauthorized persons.
- Safe and secure storage and transportation of your firearm are your responsibility. It is a full-time responsibility.
- YOU SHOULD ALWAYS SECURE YOUR FIREARM IN A
  MANNER THAT WILL PREVENT UNAUTHORIZED ACCESS.
  ALWAYS STORE YOUR FIREARM UNLOADED.
  Your firearm and ammunition should be stored in separate places and in a manner inaccessible to children and unauthorized persons.
- ALWAYS MAKE CERTAIN THAT YOUR FIREARM IS SAFELY SECURED IN A MANNER SO AS TO PREVENT UNAUTHORIZED ACCESS TO THE FIREARM. WALTHER HAS PROVIDED A LOCK FOR THIS PURPOSE.

Please read and follow the instructions packaged separately for the use of this lock. There are other alternative locks and safe storage containers available in the marketplace which may be appropriate for your particular needs. Consult your local gun shop, hardware store, or local police department for guidance on the variety of other safe storage devices or practices which may be appropriate for your particular needs. By purchasing this firearm you have taken on the responsibility of safely securing the firearm at all times and preventing its unauthorized use. Never assume that the use of this lock is sufficient to safely secure your firearm. It is your personal responsibility to select and use whatever measures or practices that will enable you to be absolutely certain that your firearm is secure at all times.

#### SAFE STORAGE & TRANSPORTATION CONT'D.

Only you can determine what devices or practices are appropriate for the safe storage of your firearm and your ammunition.



WARNING: DO NOT LOCK A LOADED HANDGUN AND NEVER LOAD A LOCKED HANDGUN!!

- NEVER ASSUME THAT A "HIDING" PLACE IS A
   SECURE STORAGE METHOD. Others may be aware of
   your storage location or come upon it by chance. It is your
   personal responsibility to use common sense when storing
   and securing your firearm and ammunition and to always
   make sure that it is not accessible to children or other
   unauthorized persons.
- ALWAYS FOLLOW THE LAW!! You must be familiar with all local, state, and federal laws regarding the safe storage and transportation of your firearm. Failure to know and follow the law may result in unauthorized access or use of your firearm by another. Obey all laws relating to the storage and transportation of firearms.
- NEVER TRANSPORT A LOADED FIREARM.
   When transporting your firearm, be sure it is unloaded and that the cylinder or action is open.
- Your local police department or gunshop will furnish you with available information on storing and/or transporting a firearm legally.
- YOUR FIREARM IS YOUR RESPONSIBILITY.
   Protect your firearm from theft or misuse by untrained or unqualified individuals.

#### MAINTENANCE BEFORE STORAGE

When storing, do not encase your firearm in anything that will attract or hold moisture, for example, leather or heavy cloth. Also, do not store guns with a plug inserted in the barrel for this can be a contributing factor to moisture accumulation. If your firearm is to be stored for an extended period, the bore, chambers and internal working mechanism should be oiled with acid-free lubricating oil or preservative, and the external working mechanisms, frame, cylinder and barrel should be coated with an anti-rust oil. Before using your firearm again, be sure to clean it. Every time you clean your firearm, check it for signs of wear. If wear is noted, do not use the firearm. Return it to Walther for service or have it checked by a qualified gunsmith.

#### MAINTENANCE BEFORE USE

Before using your firearm, it should be cleaned. (See Cleaning Instructions) Your firearm has been treated with either a preservative or oil to protect it against corrosion. Before using it, all excess oil should be wiped from the bore, chambers (charge holes), and exposed areas using a clean swab or patch. A light coat of high quality gun oil should be applied to the outside surfaces and mechanism. Care should be taken not to oil the mechanism to the degree that dirt and powder residue may be trapped by the oil. There are further instructions in the cleaning section of this manual.

### NOMENCLATURE

Walther handguns are reliable and safe to use when the firearm safety rules are followed. There are a number of internal safety mechanisms within the lockwork of the handgun which ensure that the firearm will not discharge unless the trigger of the handgun is pulled. That is one reason why it is important to never modify or alter your firearm. Before you use your handgun, you should be fully familiar with its operation.

Here is a list of basic firearms terminology.

AMMUNITION - CENTERFIRE - Ammunition which contains the primer in the center of the base of the case. Among the most common centerfire handgun cartridges are the .32, .38 Special, .380, 9mm, .357 Magnum®, .40 S&W®, .45 ACP and the .44 Magnum®.

AMMUNITION - RIMFIRE - Ammunition which contains the primer material in the rim. Among the most common rimfire handgun cartridges are the .22 Long, .22 Short, .22 LR, .22CB, .22BB, and .22 Magnum.

**CALIBER** - The diameter of a bullet, designated in hundredths or thousandths of an inch (.357) or in millimeters (9mm).

**<u>DECOCK</u>** - The process by which the hammer or striker is safely lowered.

<u>DOUBLE ACTION</u> - A firing action where the hammer or striker is drawn back, released, and the gun fired by a single pull of the trigger.

**<u>DOUBLE ACTION ONLY</u>** - A firearm designed so that it can only be fired in double action.

**PISTOL** - A handgun that contains multiple cartridges in a magazine.

**REVOLVER** - A handgun that contains multiple cartridges in a cylinder that revolves at the rear of the barrel.

**SINGLE ACTION** - A firing action where the hammer or striker is released from the cocked position by pulling the trigger.

The operation of your handgun will be explained in greater detail in the pages that follow, as well as a greater description of key component parts.

## PREPARATION FOR FIRING



WARNING: THE FAILURE TO FOLLOW THESE FIREARM SAFETY REQUIREMENTS WILL CAUSE SERIOUS PERSONAL INJURY OR DEATH TO YOU OR OTHERS.

#### PREPARATION FOR FIRING CONT'D.

- **ALWAYS WEAR ADEQUATE AND PROPER EAR** PROTECTION SPECIFIED FOR FIREARM USE to prevent permanent damage to your hearing. Make sure others who are nearby are wearing ear protection as well.
- **ALWAYS WEAR SAFETY GLASSES SPECIFIED FOR** FIREARM USE, whether indoors or out. Safety glasses should protect your eyes from the firing flash and particles associated with the discharge of ammunition. Failure to do so creates a risk of personal injury from particle or debris spitting or ricochets.
- NEVER SHOOT AT HARD SURFACES, WATER OR UP INTO THE SKY. Always select a place to shoot that has a safe backstop and is free from obstructions and water surfaces which cause ricochets.
- **ALWAYS BE AWARE OF OTHER PEOPLE** so that persons cannot accidentally walk into the line of fire.
- ALWAYS POSITION THE SHOOTER AND ALL OTHERS SO THAT THEY ARE OUT OF THE LINE OF FIRE and are not within an area where they may be struck by ricochets, particles spitting from a revolver, or by ejected cases from other types of firearms.
- **ALWAYS KEEP FINGERS AND OTHER PARTS OF YOUR** BODY AWAY FROM THE MUZZLE, AWAY FROM THE GAP BETWEEN THE REVOLVER BARREL AND CYLINDER, AND AWAY FROM THE PISTOL SLIDE AND EJECTION PORT.
- ALWAYS BE ALERT AND ALWAYS FOLLOW THE SAFETY INSTRUCTIONS OF THE RANGE OFFICER.
- **ALWAYS BE SURE THAT ALL CYLINDERS AND** ACTIONS OF FIREARMS ARE OPEN, THAT CHAMBERS ARE CLEAR OF CARTRIDGES, MAGAZINES ARE REMOVED, AND THAT FIREARMS ARE POINTING IN A SAFE DIRECTION.
- ALWAYS BE ALERT. Never shoot if you are tired, cold or impaired in any way.
- ALWAYS TREAT YOUR FIREARM AS IF IT WERE LOADED.
- NEVER USE ALCOHOL OR DRUGS BEFORE OR WHILE SHOOTING.

## **AMMUNITION**

#### **GENERAL PRINCIPLES** Α.

A firearm and ammunition are a system and must work together. Their performance is closely related. There are different types of ammunition for different types of firearms. Your firearm has been designed for ammunition of a specific type and a specific caliber. It is important to select **1** the proper ammunition for your firearm.

WARNING: NEVER USE AMMUNITION NOT SPECIFICALLY DESIGNATED FOR USE IN YOUR FIREARM. FAILURE TO USE THE CORRECT TYPE OR CALIBER OF AMMUNITION MAY CAUSE THE FIREARM TO JAM, FAIL TO FIRE OR EVEN GENERATE EXCESSIVE PRESSURE WHICH CAN DAMAGE OR EVEN RUPTURE YOUR FIREARM, CAUSING PERSONAL INJURY, DEATH OR PROPERTY DAMAGE.

- You are responsible for selecting ammunition that meets industry standards and is appropriate in type and caliber for this firearm.
- Locate the caliber designation marked on the handgun. This information indicates the ammunition caliber that should be used in this firearm. (See figure #1).



FIGURE 1

#### **B. HANDLOADED OR RELOADED AMMUNITION**



WARNING: NEVER USE NON-STANDARD, RELOADED OR "HANDLOADED" AMMUNITION WHICH HAS NOT BEEN SUBJECTED TO INTERNAL BALLISTIC PRESSURE TESTING. RELOADED OR

HANDLOADED AMMUNITION, MAY HAVE MANY MANUFACTURING AND QUALITY VARIABLES (SUCH AS THE TYPE AND AMOUNT OF GUN POWDER). ANY AMMUNITION THAT IS IMPROPERLY MANUFACTURED, EVEN IN THE SLIGHTEST DEGREE, MAY FAIL TO FIRE OR MAY GENERATE EXCESSIVE INTERNAL PRESSURES WHICH CAN DAMAGE OR EVEN RUPTURE THE FIREARM, CAUSING PERSONAL INJURY OR DEATH TO THE SHOOTER OR THOSE IN THE IMMEDIATE VICINITY.

 Use only commercially manufactured ammunition with internal ballistic pressures which are in strict accordance with the specifications of the Sporting Arms and Ammunition Manufacturers' Institute (SAAMI). If you are uncertain, contact your ammunition supplier for verification.

#### C. AMMUNITION SPECIFICS

- Use only ammunition specifically recommended by Walther for your firearm.
- Never mix ammunition.
- Never use a cartridge not specifically designated for use in your firearm. Pressure from the wrong type of ammunition may exceed the capability of your firearm and may damage or even rupture your firearm.
- In some cases, a round of ammunition not specified on your handgun may fit into the chamber or cylinder. Firing ammunition not specified on your handgun may cause it to rupture and cause serious injury or death to you or others.


#### AMMUNITION CONT'D.

- "Plus-P" (+P) ammunition generates pressures in excess of the pressures associated with standard ammunition. Such pressures may affect the wear characteristics or exceed the margin of safety built into some handguns and could therefore be DANGEROUS.
- "Plus-P-Plus (+P+) ammunition is not recommended for use in Walther firearms. This marking on the ammunition designates that it exceeds established industry standards, but the designation does not represent defined pressure limits and therefore such ammunition may vary significantly as to the pressures generated.


## MODEL NUMBER IDENTIFICATION



#### FIGURE 2

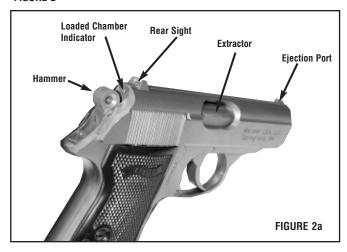

## INSPECTING YOUR HANDGUN

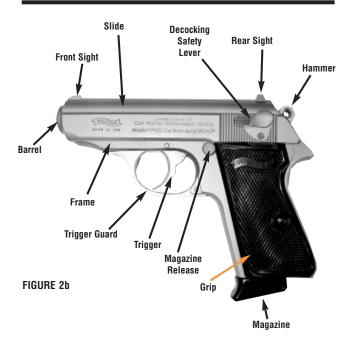

When you inspect your pistol, you should first check for yourself to ensure that it is unloaded. To do this, grasp the pistol with your finger off the trigger <u>and outside the trigger guard</u>, point the pistol in a safe direction, depress the magazine release, and remove the magazine.

With the pistol still pointing in a safe direction, grasp the serrated sides of the slide from the rear with the thumb and fingers as shown in Figure 3, and briskly draw the slide fully rearward in order to extract any cartridge from the barrel chamber and clear it from the pistol. Do not obstruct the ejection port because doing so can interfere with ejection of a cartridge and thereby creates the risk of exploding an unchambered cartridge and possible injury. To lock the slide open, insert an empty magazine into the pistol. Pull the slide fully back and release. Remove the magazine. You are now able to safely check the barrel chamber and magazine well (opening) visually for any obstructions (Figure 4). You must follow this procedure every time your firearm is inspected, cleaned, handed to another person, transported or stored. To unload a loaded magazine, hold it with the bullet end of the cartridge pointing away from you and others and press each cartridge forward and out of the magazine.

To close the slide on an unloaded pistol, first remove the magazine and then pull the slide fully back and release it.

#### INSPECTING YOUR HANDGUN CONT'D.

#### FIGURE 3




FIGURE 4



Familiarize yourself with the safety decocking lever on your pistol. When the safety decocking lever is fully up (parallel to the top of the slide) as shown in figure 5, it is in the "fire" position; when the safety decocking lever is fully down (figure 6), it is in the "safe" position. Notice how the safety decocking lever looks and feels in each of the two positions of its extreme travel - fully up for "fire" and fully down for "safe". Your pistol may have a red dot which is totally visible when the safety decocking lever is in the "fire" position; however, do not rely on your inability to see a red dot as the only indication that the safety decocking lever is engaged.

Please be advised that other model or brand pistols may have a safety decocking lever that operates differently.

FIGURE 5

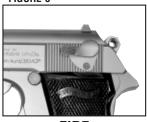

FIRE

#### FIGURE 6



SAFF

## **LOADING**

 Do not load your pistol until you have read and understand the Basic Firearms Safety Rules.

WARNING: WALTHER PPK AND PPK/S PISTOLS ARE DESIGNED SO THAT THEY ARE ABLE TO FIRE WHEN THE MAGAZINE IS REMOVED. THEREFORE, IF THE MAGAZINE IS REMOVED FROM THE PISTOL AND THERE IS A LOADED ROUND IN THE CHAMBER, IT WILL FIRE IF THE TRIGGER IS PULLED. AFTER INSERTING A MAGAZINE, ALWAYS TEST TO MAKE SURE IT IS LOCKED IN PLACE BY APPLYING SOME REMOVAL PRESSURE TO THE EXPOSED PORTION OF THE MAGAZINE BUTT PLATE.

#### LOADING CONT'D.

- Use only Walther magazines specifically manufactured for your particular model of pistol. Do not interchange magazines from one model pistol into another model pistol.
- Walther has provided you with a magazine designed to operate in your specific model of pistol. While your magazine may be able to be inserted into another model pistol, it will only function properly in the specific model for which it was designed.
- Follow the instructions in this manual and any other specific instructions which may be marked onto, or accompany, a magazine. Failure to use the particular type of Walther magazine specified for your model and caliber of pistol may result in a malfunction.
- Load the magazine by pressing a cartridge head (rear of cartridge) downward on the forward portion of the magazine follower (or downward
  - on the case of the previously loaded cartridge) and sliding the cartridge fully under the lips of the magazine until the cartridge head is against the rear wall of the magazine. Repeat the procedure for the number of cartridges you wish to load, up to the magazine capacity. Do not



attempt to load your magazine with more than the specified number of cartridges because doing so can cause a feeding failure. (Figure 7)

 Inspect your pistol as previously described in the "Inspecting Your Pistol" section. Hold the pistol in one hand while pointing it in a safe direction and with your finger off the trigger and outside the trigger guard. Insert the loaded magazine into the magazine well (opening) with enough force to ensure that it is locked in place.



WARNING: DO NOT USE EXCESSIVE UPWARD FORCE WHEN INSERTING A LOADED MAGAZINE INTO THE PISTOL. EXCESSIVE UPWARD FORCE COULD CAUSE THE SLIDE TO MOVE FORWARD, CHAMBERING A ROUND AND MAKING THE PISTOL READY TO FIRE.

#### LOADING CONT'D.

- To make sure that the magazine is fully and securely inserted, apply some removal pressure to the exposed portion of the magazine butt plate.
- Pull the slide firmly to the rear and release it completely allowing it to carry fully forward. This strips a cartridge from the magazine and seats it in the chamber of the barrel.
- Take this opportunity to look at the loaded chamber indicator. If the loading procedure has been properly followed, you will observe the loaded chamber indicator pin protruding fromthe back of the slide.



WARNING: THE PISTOL CAN NOW BE FIRED BY PULLING THE TRIGGER TO THE REAR.

- Rotate the safety decocking lever to the down "safe" position.
- If you wish to restore the magazine in your pistol to its full capacity, depress the magazine release and remove the magazine from the pistol. Remember that there is a round in the chamber; therefore, the weapon should be holstered or safely secured during this process and the trigger should never be moved. Load one cartridge into the magazine to replace the one which was chambered when you allowed the slide to carry forward.
- Re-insert the loaded magazine into the magazine well of the pistol until it is locked in place. To make sure that the magazine is again fully and securely inserted, apply some removal pressure to the exposed portion of the magazine butt plate.
- Your pistol is now fully loaded and may be holstered and carried safely.. Remember to keep your pistol pointed in a safe direction under all conditions and always keep your finger or any other object off the trigger and outside the trigger guard until you have made the commitment to fire the handgun. Never leave a loaded firearm unattended.


## LOADED CHAMBER INDICATOR




WARNING: WHEN VIEWING THE LOADED CHAMBER INDICATOR, YOU MUST ALWAYS REMEMBER TO KEEP THE FIREARM POINTED IN A SAFE DIRECTION WITH YOUR FINGER OFF THE TRIGGER AND OUT OF THE TRIGGER GUARD.

 Currently manufactured Walther PPK and PPK/S pistols come with a loaded chamber indicator. This indicator can be observed by looking at the rear of the slide just above the hammer (Figure 8) noting a small hole. If the firearm's chamber is loaded, you will observe a silver pin protruding from this hole. (Figure 8a)

#### LOADED CHAMBER INDICATOR CONT'D.

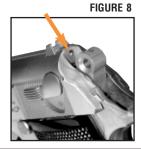

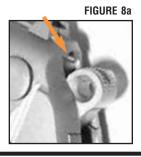

### **FIRING**



WARNING: WEAR EYE AND EAR PROTECTION SPECIFIED FOR FIREARM USE EVERY TIME YOU DISCHARGE YOUR FIREARM. MAKE SURE OTHERS IN THE VICINITY OF WHERE YOU WILL BE SHOOTING DO SO AS WELL.



WARNING: DURING FIRING ALWAYS KEEP THE BARREL POINTED IN A SAFE DIRECTION.



WARNING: UPON FIRING THE PISTOL OR RELEASING THE SLIDE FROM THE SLIDE STOP, THE SLIDE MOVES REARWARD OR FORWARD WITH SIGNIFICANT FORCE AND SPEED. TO AVOID INJURY, BE SURE NO PART OF YOUR BODY INTERFERES WITH THE SLIDE MOVEMENT OR EJECTION OF THE FIRED CASE.

- Rotate the safety decocking lever fully up into the "fire" position. The first shot from this uncocked centerfire pistol will be fired in the double-action mode. As the trigger is drawn fully to the rear, the hammer moves rearward and is released to strike the firing pin. Upon firing, the slide moves rearward thereby extracting and ejecting the spent cartridge case.
- The slide then returns forward feeding the next cartridge from the magazine to the barrel chamber.
- The hammer remains in the cocked position and the trigger is in the rearward position so that subsequent shots will be fired in single action mode. This sequence can be repeated until the last round has been fired at which time the magazine follower exerts upward pressure on the slide stop causing it to engage the slide and hold it in the "open" position.



WARNING: SINGLE ACTION FIRING REQUIRES SIGNIFICANTLY LESS PRESSURE ON THE TRIGGER AND REDUCED TRIGGER TRAVEL THAN DOUBLE ACTION FIRING.

### MANUAL COCKING

The first shot may be fired in the single action mode when so desired. You can prepare your pistol for single action firing by pointing the muzzle in a safe direction, ensuring your finger remains off of the trigger, rotating the safety decocking lever fully up into the "fire" position, and pull the hammer spur rearward until it locks into the fully-cocked position.

## **DECOCKING**

If you decide not to fire after you have manually cocked the hammer or if you decide to suspend firing, keep the pistol pointed in a safe direction. Remove your finger from within the trigger guard and rotate the safety decocking lever fully down into the "safe" position. This action will decock the hammer allowing it to fall against the decocking safety body and will release the trigger to its forward position. The pistol may now be holstered and carried safely.

### CLEARING MISFIRES

If during firing, a cartridge fails to fire, the pistol will remain in the double action mode. If the situation permits, the trigger may be pulled once or twice more. If ignition still fails, the chamber must be manually cleared. While keeping the muzzle pointed in a safe direction, wait 10 seconds and then rotate the safety decocking lever fully down into the safe position. Depress the magazine release button and release the magazine from the pistol. Grasp the serrated sides of the slide from the rear and briskly pull the slide rearward to eject the misfired round. Do not obstruct the ejection port, and do not attempt to catch the round by placing your hand over the ejection port. (Figure 9)





WARNING: IF YOUR HANDGUN GIVE ANY INDICATION THAT IT IS NOT PERFORMING PROPERLY, OR THE OPERATION OF YOUR HANDGUN HAS CHANGED "THE WAY IT FEELS OR SOUNDS", STOP FIRING. MAKE SURE THE FIREARM IS POINTED IN A SAFE DIRECTION, UNLOAD THE FIREARM AND HAVE IT INSPECTED AND TEST FIRED BY A GUNSMITH QUALIFIED TO PERFORM SERVICE ON WALTHER PISTOLS.

## PRODUCT WARNING

#### All Walther handguns capable of double action firing!

- It has come to our attention that some users of Walther pistols capable of firing in double action may stage the trigger in anticipation of firing a shot in the double-action mode. Staging is the act of pulling the trigger rearward toward but just short of the point where the hammer falls and the pistol fires. Such manipulation of the trigger can reduce the user's control of the handgun and can result in an unintentional discharge. Furthermore, if the user decides not to fire, release of the trigger from a position close to the firing point in the staging process could result in a discharge.
- Obviously "staging" the trigger violates a basic rule of firearm safety which warns you to keep your finger off the trigger and outside of the trigger guard until you are ready to fire.
- We warn all users of our pistols capable of firing in double action to refrain from "staging" the trigger.

## **UNLOADING**

- Place the decocking safety lever into the down "safe" position.
- Point the pistol in a safe direction and press the magazine release button and remove the magazine.
- Grasp the serrated sides of the slide from the rear with the thumb and fingers as shown in figure 3, briskly draw the slide fully rearward in order to extract any cartridge from the barrel chamber and clear it from the pistol.
- Unload the magazine by holding it with the bullet end of the cartridge pointing away from you and others and pressing each cartridge forward and out of the magazine.
- After double checking that the magazine is empty, place this unloaded magazine into the gun.



WARNING: WHEN VIEWING THE LOADED CHAMBER INDICATOR, YOU MUST ALWAYS REMEMBER TO KEEP THE FIREARM POINTED IN A SAFE DIRECTION WITH YOUR FINGER OFF THE TRIGGER AND OUT OF THE TRIGGER GUARD. (FIGURE 8 & 8A)

- Grasp the serrated sides of the slide from the rear with the thumb and fingers as shown in figure 3, briskly draw the slide fully rearward and release. The slide should remain open. Visually check to the barrel chamber and bore for any obstructions.
- You must follow this procedure every time your firearm is inspected, cleaned, handed to another person, transported or stored.

19

## FIELD STRIPPING DISASSEMBLY



WARNING: SAFETY GLASSES SHOULD BE WORN DURING THIS PROCESS.



WARNING: ALWAYS POINT THE PISTOL IN A SAFE DIRECTION AND BE SURE TO KEEP YOUR FINGER

OUTSIDE THE TRIGGER GUARD. BE SURE YOUR PISTOL IS UNLOADED BEFORE DISASSEMBLY.

- Remove the magazine by depressing the magazine release button, clear the chamber and verify it is empty.
- With the pistol unloaded, hold the grip firmly in one hand and put your index finger along the side of the trigger guard. With your other hand, pull down the front of the trigger guard. (Figure 10) When the front of the trigger guard comes out of the frame, press it sideways with your index finger to keep it from springing back up into the frame. (Figure 11)
- With your free hand, grab the slide by its grooves and pull it all the way back until you can lift the back end up, clear off the frame. (Figure 12) Ease the slide forward and off the pistol. Be careful not to let go of the slide while you can still feel the spring tension, or it could fly off of the pistol and be damaged or cause injury.









Pull the recoil spring off the front of the barrel. No further disassembly is required. (Figure 13)

## FIELD STRIPPING REASSEMBLY

WARNING: ALWAYS FOLLOW THE FIELD STRIPPING INSTRUCTIONS EXACTLY. NEVER DO ANYTHING BEYOND WHAT YOU ARE SPECIFICALLY INSTRUCTED TO DO IN THIS MANUAL. NEVER ALTER OR MODIFY THE PARTS IN YOUR PISTOL.

WARNING: ALWAYS POINT THE PISTOL IN A SAFE DIRECTION AND BE SURE TO KEEP YOUR FINGER OUTSIDE THE TRIGGER GUARD. BE SURE YOUR PISTOL IS UNLOADED BEFORE REASSEMBLY.



WARNING: SAFETY GLASSES SHOULD BE WORN DURING THIS PROCESS.

 Put the recoil spring, small end first, on the barrel as shown in figure 13. (If you put it on the large end first, it can fall off when

you point it down.) Cock the hammer. Pull the trigger guard down out of the frame as in the Disassembly section.

 Put the slide over the forward end of the recoil spring and pull the slide back onto the barrel all the way until it stops



(Figure 14). Then push the rear of the slide down until the grooves inside the slide line up with the rails on the frame. When properly aligned, ease the slide forward all the way. Then let go of the trigger guard so it goes up into the frame.

 Before you load the pistol, check for proper assembly. Look at the breech face and in the chamber and barrel, slide the slide back and forth, put an empty magazine in, be sure the slide locks open and so on. Be sure the pistol is unloaded and pointing in a safe direction when you test its functions.

## SIGHT ADJUSTMENT



ENSURE YOUR FIREARM IS UNLOADED BEFORE ADJUSTING YOUR SIGHTS. AT ALL TIMES FOLLOW THE BASIC RULES OF SAFE GUN HANDLING.

#### **WINDAGE**

To adjust the strike of the bullet left or right on the target, move the rear sight in the same direction you want the bullets to move. The sight is drift adjustable in a dovetail slot. Use a brass punch or drift and a mallet, and adjust it carefully in small moves, test firing the pistol for group placement after each adjustment. If you use a steel punch or hammer directly on your pistol you will mar, deform and damage it.

- To move the point of impact LEFT, move the rear sight LEFT.
- To move the point of impact RIGHT, move the rear sight RIGHT.

#### **ELEVATION**


There is no elevation adjustment on the model PPK or PPK/S pistols.

## MAGAZINE DISASSEMBI Y

- Refer to Figure 15 for magazine disassembly and reassembly.
- Using a drift punch, depress the floorplate catch(4) through the hole in the magazine floorplate (5).
- Slide the magazine floorplate (5) off of the magazine tube (1) while holding the floorplate catch (4) in the magazine tube.(1)
- Remove the floorplate catch (4) and magazine spring (3) out through the bottom of the magazine tube (1).
- Turn the magazine tube (1) right side up and remove the magazine follower (2) through the bottom of the magazine tube (1).

## MAGAZINE RFASSFMBI Y

- Install magazine follower (2) in the bottom of the magazine tube (1) with the notched edges of the magazine follower (2) toward the round side of the magazine tube (1).
- Install the magazine spring (3) and floorplate catch (4) in the magazine tube (1).
- While holding the floorplate catch (4) in the magazine tube (1), slide the magazine floorplate (5) onto the magazine tube (1) so that the round projection of the floorplate catch (4) engages the magazine floorplate (5).

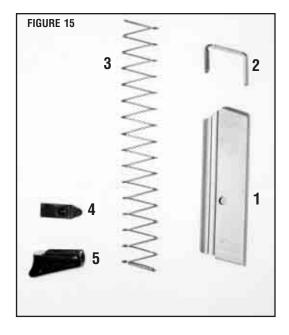

## CLEANING AND MAINTENANCE



WARNING: ENSURE YOUR FIREARM IS UNLOADED BEFORE BEGINNING TO CLEAN IT (SEE UNLOADING SECTION). ALWAYS FOLLOW THE RULES OF SAFE GUN HANDLING.

Your firearm is a precision instrument. To insure reliable function it is necessary to follow a routine maintenance procedure. After firing your handgun, be sure to unload it following the procedure outlined in the section entitled "Unloading" before performing any cleaning or maintenance procedure.

Your handgun should be cleaned by brushing the barrel bore and chamber (charge holes) with a good powder-removing solvent and bore brush. Wipe the areas clean with patches or a swab.

Using a small brush dipped in solvent, remove all deposits from around the breech of the barrel, chamber (charge holes), extractor and adjacent areas which have been subjected to the action of powder or primer residue. Remove any residue on the frame with light brushing and a solvent. After cleaning the entire gun, use a cloth to apply a light film of high quality gun oil to all external metal surfaces and wipe clean.

#### CAUTION:

Always follow the instructions provided with your gun cleaner and gun lubricant.

#### **CAUTION:**

Some cleaners can cause damage to your handguns. You should avoid prolonged solvent immersion and prolonged ultrasonic cleaning of your firearm. Choice of solvent should be restricted to those products specifically developed for firearms maintenance. Damage to a firearm's finish may occur if these cautions are ignored. Ammoniated solvents or other strong alkaline solvents, should not be used on any Walther firearm. As a rule of thumb, if you would be comfortable applying the solvent of your choice to the finish of your automobile, it will probably be safe for use on your firearm.

After the initial cleaning, there is usually some residue in both the barrel and cylinder that works out and becomes apparent within 24-48 hours. This can be removed with a bristle brush and a light re-application of powder removing solvent after which the oil film should be re-established on all surfaces.



WARNING: FOR ANY MAINTENANCE OR SERVICE NOT SPECIFIED IN THIS MANUAL, YOU MUST USE A GUNSMITH QUALIFIED TO PERFORM SERVICE ON WALTHER PISTOLS.

#### CLEANING AND MAINTENANCE CONT'D.



WARNING: NEVER MODIFY OR PERMIT YOUR HAND-GUN TO BE MODIFIED UNLESS SPECIFICALLY DIRECTED TO DO SO IN THIS MANUAL.



WARNING: DO NOT MANIPULATE OR ADJUST ANY PART OF YOUR FIREARM UNLESS SPECIFICALLY DIRECTED TO DO SO IN THIS MANUAL.

If your firearm will be used or stored in a cold climate, be sure to use an oil of an appropriate weight for that climate.

Cleaning is essential to ensure the proper functioning of your handgun.

Additional maintenance must be performed by a qualified gunsmith. Please refer to the section entitled "Service".

## SERVICE, SHIPPING & PARTS

For Owners Within The United States

#### **SERVICE**

Customer Service 19 Aviation Drive Houlton, ME 04730

Tel: 800-331-0852 • 413-781-8300 ext. 2905 E-mail: ga@smith-wesson.com

Should your Walther firearm require service, it should be returned to the Walther factory or to a Walther Warranty Center in its original case or in a similarly secure container. It is not necessary to take the gun to a dealer for shipment. However, before shipping your firearm, call or e-mail our Customer Service Dept. for authorization and shipping instructions.

Before shipping your handgun, ensure that the firearm is unloaded and packaged securely. **DO NOT SHIP ANY AMMUNITION.** The package must **NOT** bear any markings which indicate the identity of the contents. Enclose a letter which includes your full name and address (no P.O. Boxes, please), daytime telephone number, e-mail address, the serial number of the firearm, and details of the problem experienced (stating the brand and type of ammunition used when the problem occurred) or work desired. Record the serial number before shipping, in case you wish to check on the repair status of your firearm.

#### SERVICE, SHIPPING AND PARTS CONT'D.

#### SHIPPING

When shipping a firearm, it is most important that you comply with federal, state, and local laws and regulations. The following guidelines are meant to help, but you must seek assistance from the appropriate authorities if necessary.

- Check magazines and chambers to ensure that they are unloaded. Do not ship ammunition.
- Do not attempt to ship a handgun via US Postal Service; only federally licensed dealers may ship a firearm by US Postal Service.
- If your firearm must be replaced, it may be necessary to ship
  the replacement to a dealer rather than directly to you. You
  will be requested to furnish a signed FFL (Federal Firearms
  License) from your dealer in such an instance.
- When returning a pistol, please include all magazines ensuring they are unloaded; they are important to the proper function of the handgun.

#### Ship ALL PPK/S pistols to:

Customer Service, 19 Aviation Drive, Houlton, ME 04730

## Please call the above telephone number or e-mail the above address before shipping!!

Since we cannot assume responsibility for custom parts and accessories, such as stocks, special sights, or holsters, please remove these items before returning your firearm.

Warranty repair work will begin upon receipt and examination of the firearm. In the case of repairs or work not covered by the warranty, a quotation covering the cost of the work plus round trip transportation charges will be sent to you. Repairs or modification will begin upon receipt of payment.

#### **ACCESSORIES & PARTS**

Replacement parts and accessories for your Walther firearm are available from your local Walther Stocking Dealer, or directly from the Walther Parts Department.

When ordering parts directly from the factory, please provide the following information:

- Model Number
- Dash Number
- Serial Number
- Approximate date of purchase
- Complete Return Address
- VISA/Discover/MasterCard Number and Expiration Date
- For Foreign Orders Only, Fax Number or E-mail Address

Please call 1-800-331-0852, ext. 2905 for any questions you have.

#### SERVICE, SHIPPING, & PARTS CONT'D.



WARNING: YOU MAY PURCHASE SOME PARTS FOR YOUR WALTHER FIREARM, YOU MUST HAVE THESE PARTS INSTALLED BY A GUNSMITH QUALIFIED TO PERFORM SERVICE ON WALTHER PISTOLS. YOU MUST NEVER ATTEMPT TO MODIFY YOUR FIREARM OR INSTALL REPLACEMENT PARTS IN YOUR FIREARM. ALWAYS USE A QUALIFIED WALTHER GUNSMITH EVEN IF

## WARRANTY STATEMENT

THE REPAIR SEEMS TO BE SIMPLE.

Due to the many different requirements imposed by federal and state laws on consumer warranties, NO EXPRESS WARRANTY, EITHER "FULL" OR "LIMITED" IS OFFERED WITH THIS PROD-UCT. IMPLIED WARRANTIES, INCLUDING THE IMPLIED WAR-RANTIES OF MERCHANTABILITY AND FITNESS FOR A PAR-TICULAR PURPOSE. ARE LIMITED IN DURATION TO ONE YEAR FROM DATE OF FIRST RETAIL PURCHASE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU.

Walther wishes, nonetheless, to assure our customers of our continued interest in their satisfaction with all our products. This firearm will be serviced at no charge to the customer for any problem which we, in our sole discretion, find to be due to defective material or workmanship, for a period of ONE YEAR FROM DATE OF FIRST RETAIL PURCHASE. Please retain your sales receipt as proof of purchase date.

This handoun is not equipped with a device that fully blocks use by unauthorized users. More than 200,000 firearms like this one are stolen from their owners every year in the United States. In addition, there are more than a thousand suicides each year by younger children and teenagers who get access to firearms. Hundreds more die from accidental discharge. It is likely that many more children sustain serious wounds or inflict such wounds accidentally on others. In order to limit the chance of such misuse, it is imperative that you keep this weapon locked in a secure place and take other steps necessary to limit the possibility of theft or accident. Failure to take reasonable preventative steps may result in innocent lives being lost, and in some circumstances may result in your liability for these deaths.

The certification below is required only for handguns sold in the United States with a barrel length shorter than 3".

Walther hereby certifies average accuracy test results for all new handguns with a barrel shorter than 3" as follows:

7 yards 14 yards 21 yards 1.7" 3.9" 6.3"

This certification is based on tests conducted by Walther using a fixed handgun, rest and firing ammunition manufactured by a member of the Shooting Arms and Ammunition Manufacturers Institute (SAAMI) as defined in ANSI/SAAMI Z299.3-1993.

This certification represents actual tests based on several handguns, selected at random. Your particular handgun may have accuracy better than the results stated in this certification.



Distributed in the United States by Smith&Wesson®

2100 Roosevelt Avenue • Springfield, MA 01104 www.waltheramerica.com